

# sPOD SE BLUETOOTH MODULE INSTALLATION INSTRUCTIONS

Revision 1.0



## REQUIREMENTS

- Devices must be Bluetooth 4.0 compatible
- Android **4.4 KitKat** or newer operating system
- iPhone 4s or newer; iPad 2 or newer; iPad mini – **iOS 7** or newer
- Existing **SE sPOD** system
- Access to iTunes App Store or Google Play Store

## INCLUDES


- SE System Bluetooth Module

 
 
 



## INSTALLATION

**Video Instructions:** "sPOD SE System Bluetooth Module FAQ 5" (<https://www.youtube.com/watch?v=61C5-t6W-ig>)

**BEFORE STARTING!!** During Installation be sure that you are at least 400 feet from any other sPOD wireless system and no other devices have the app activated.

1. In the iTunes/Google Store search for "sPOD SE" and install the app. → 
  - Make sure the device's bluetooth is turned on.
2. Plug the Bluetooth Module into your existing SE source board.
  - i) Line up the 3 plastic white stand-offs on the SE board with the holes in the Bluetooth Module.
  - ii) Make sure the pins on the Bluetooth Module are also lined up with the existing Socket on the SE board.
  - iii) Carefully press down on the Bluetooth Module until it seats into place. You do not need to press down until the stand-offs lock, only until snug.
3. Pull the 2 amp fuse out of the Source for 30 seconds and replace. Then start the engine.

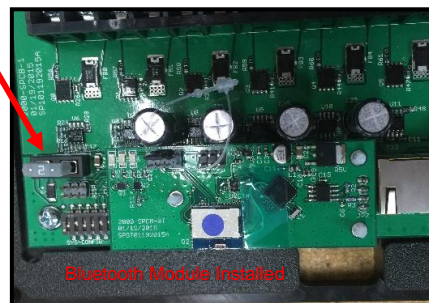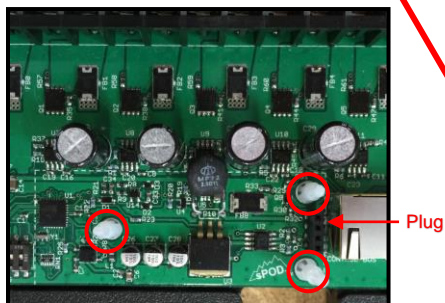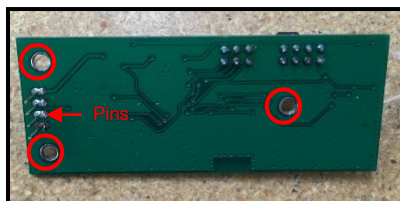

4. Be sure that the Bluetooth symbol is showing. → 
5. Start the sPOD app and allow for the system to connect.
6. Try any of the switches to be sure you have a connection.



**Note:** Keep Bluetooth Module dry


## SETTING THE PIN

 (Setting a custom PIN prevents others from connecting to your Bluetooth Module & secures your device to the Module)

**IMPORTANT!! DO NOT change the PIN until Bluetooth Module is connected.**

**Make sure to test that the switches on the app are working to control the SE sPOD system.**

1. Within the app, go to "Settings" in the lower left corner.
2. Touch in the "Old PIN" box and enter "0000" (4 Zeros).
3. Touch in the "New PIN" box to create your custom pin "XXXX" (numbers only) then press "Update."

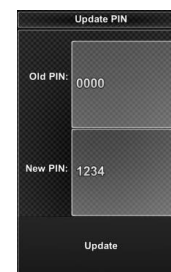

# sPOD SE BLUETOOTH MODULE INSTALLATION INSTRUCTIONS

Revision 1.0

 
 
 
 
## TO RESET THE PIN

### On the Module

- Remove the jumper from the top two middle pins of JP1.
- Install the jumper on the top left two pins of JP1 (Position 2).
- Wait 5 seconds.
- Reinstall the jumper on the top two middle pins of JP1 (Position 1).

### On the App

- Input "0000" in both the Old and New PIN spaces and "Update."
- Or for a new device or app reinstalled, the PIN has been set to "0000" as factory should connect.

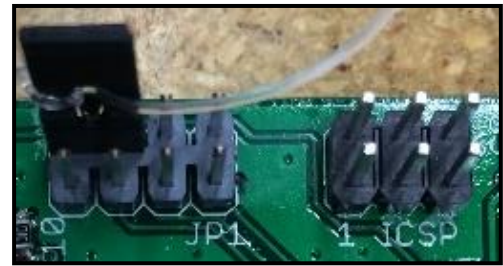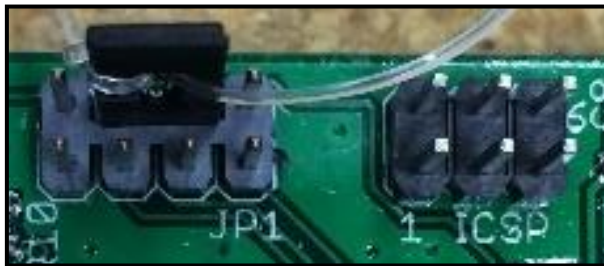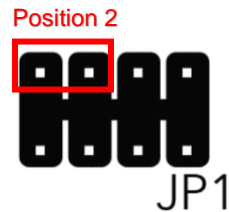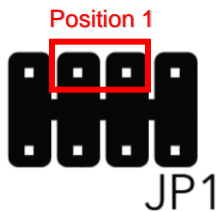

---

## CUSTOMIZATION

- In the settings menu, you can customize:
  - The names of the switches
  - The features of the switches (Dim, Momentary, Strobe, and Flash)
  - The color of the switches
- You can also select which Source to control if you have multiple sources

---

## TROUBLESHOOTING

(If the app will not connect)

1. Be sure that no other sPOD Bluetooth devices are within 400 feet and that no other devices are running the app.
2. Close the app completely on the device.
3. Pull the 2-amp fuse from the SE Source Board and wait 30 seconds then reinstall the fuse.
4. Start the vehicle's engine and start the app then follow the standard procedure to connect.