



MAIN CONTROL SCREEN

POD Off Off Road

Switch 1 0.0 Switch 2 0.0 Switch 3 0.0 Switch 4 0.0

Switch 5 0.0 Switch 6 0.0 Switch 7 0.0 Switch 8 0.0

Temp 86 F Battery 12.7 V

Setup

Callouts:

- TOUCH TO TURN SCREEN OFF. HOLD FOR 1 SECOND TO TURN ALL ACCESSORIES OFF TOUCH IN AREA OF WHERE OFF BUTTON IS TO TURN SCREEN ON
- SOURCE # INDICATOR
- "OFF ROAD" MODE ENABLES THE FLASH AND STROBE FEATURES. "ON ROAD" MODE DISABLES THE FLASH AND STROBE FEATURES.
- SLIDER USED FOR DIMMING YOUR OFFROAD LIGHTS
- TOUCH TO TURN SCREEN OFF. HOLD FOR 1 SECOND TO TURN ALL ACCESSORIES OFF TOUCH IN AREA OF WHERE OFF BUTTON IS TO TURN SCREEN ON
- CURRENT METER (ONLY AVAILABLE WHEN USED WITH THE BANTAM)
- SELECT TO ENTER PROGRAMMING MODE
- SOURCE BOARD TEMP NORMAL RANGE IS BETWEEN 0 DEG F & 220 DEG F TO CHANGE TO CELSIUS, HOLD TEMP ICON FOR 5 SECONDS TO TOGGLE BETWEEN TEMP MODES
- BATTERY VOLTAGE MONITOR SYSTEM WILL SHUT DOWN WHEN VOLTAGE DROPS BELOW 11.2V FOR LONGER THAN 2 MINUTES MUST RESTART ENGINE TO RE-INITIALIZE SYSTEM (12.8 TO RESTART)

SWITCH PROGRAMMING SELECTION SCREEN

Select Switch to Customize

Create a Master Switch that will activate all linked switches in the group when turned on.

USE THIS SLIDER TO ADJUST BACKGROUND BRIGHTNESS AND SLEEP TIMER ADJUSTMENT

TOUCH THIS TO TOGGLE BETWEEN TIMER AND INTENSITY

TO LOCK THE SCREEN, PRESS & HOLD FOR 2 SECONDS

USED TO DISABLE SWIPE FUNCTION

TO UNLOCK THE SCREEN, HOLD FOR 5 SECONDS

HOME SCREEN VIEW WHEN LOCKED

DEFAULT SOURCE IS 1. IF YOU HAVE MULTIPLE SOURCES, THIS IS WHERE YOU SELECT WHICH SOURCE TO CONTROL. YOU MAY ALSO SWIPE LEFT OR RIGHT TO CHANGE BETWEEN SCENES

USED TO PAIR TO THE BANTAM APP

Callouts:

- Switch 1-8
- Screen Unlocked/Pair/Reset/Backlight Intensity
- Select Source 1-4
- Swipe off
- revD v1.2.9
- Screen Locked
- Swipe on DISABLED
- Bluetooth Pair/Reset/Backlight Intensity

SWITCH CUSTOMIZATION SCREEN

Line 1: Switch

Line 2: 1

Line 3:

Switch Features

q w e r t y u i o p

a s d f g h j k l

Shift z x c v b n m Del

Back Save

Callouts:

- SELECT EACH LINE AND ENTER TEXT. MAX 8 CHARACTERS PER LINE.
- PRESS HERE TO ENTER INTO Switch Features SCREEN
- WHEN DONE, PRESS & HOLD Save FOR 1 SECOND. BUTTON WILL FLASH RED TO SAVE

SWITCH FEATURE SCREEN

Switch Feature Options

Dimmable Strobe

Momentary Flash

Back Switch 1

Callouts:

- THIS SHOWS WHAT SWITCH YOU ARE CURRENTLY PROGRAMMING

PLEASE BE SURE TO ABIDE BY YOUR STATE LAWS WHEN USING FEATURES SUCH AS STROBE AND FLASH.

"OFF ROAD" / "ON ROAD" MODE:



Selecting the "Off Road" mode enables you to use all of the flash and strobe features that you have programmed to use for certain switches (in the "Switch Feature Options" menu).



Selecting the "On Road" mode disables all the flash and strobe features. Switching to "On Road" will change ALL switches currently in flash or strobe mode to solid on.



LINK


The “Link” option allows you to turn on multiple switches with one (Master) switch.

1. In the “Switch Programming Selection Screen” start by pressing “Link”



NOTE Strobe function must be turned off before you go back into the setting to disable it. If it's left on, then the strobe function will not be disabled.

2. Click on any switch to program it as the Master switch

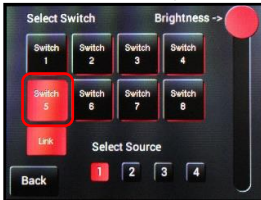

NOTE You can still use all grouped switches individually, but turning on the master switch will turn on all switches in the group.

3. Click on all switches you wish to link the Master switch



PLEASE BE SURE TO ABIDE BY YOUR STATE LAWS WHEN USING FEATURES SUCH AS STROBE AND FLASH.

4. Then click “Link” and “Back”

SWITCH ICON CUSTOMIZING

The sPOD Bantam app will allow the buttons to be customized. In Google Play (for Android) or iTunes (for Apple), search “sPOD Bantam”. Download the sPOD Bantam app onto your smartphone or tablet. Be sure that your device's Bluetooth is turned on.




1. On Touchscreen, touch the “Setup” button and then the “Pair” button to put it in “pairing mode” for 60 seconds.
2. Open the Bantam app and touch “Setup”.
3. Touch the “Scan” button and wait 10 seconds.
4. When “Pairing Request” dialogue box appears Hit “Cancel” and wait for the PIN to appear in upper left (in White).
5. When “Pairing Request” dialogue box appears again, enter PIN number and then touch the Pair button. The app will now be paired to the Touchscreen and will be ready to use. To reset pairing with all devices, touch and hold the “Reset” button for 10 seconds.



CALIBRATION

1. Use a small flathead screwdriver to pull off the small plug. This will expose the calibration button on the back
2. While touchscreen is plugged in, press the **white** calibration button that is inside the access hole
3. Follow the instructions on the screen, touching the screen where shown. Repeat as required for desired results
4. Replace the plug when finished

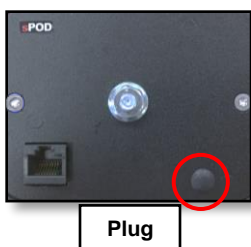

IF TOUCHSCREEN GOES INTO SLEEP MODE, TAP THE UPPER LEFT CORNER OF THE SCREEN.