
## BANTAM LOW VOLTAGE BYPASS INSTALLATION INSTRUCTIONS

Revision 2.0 // PART NUMBER BAN-LVBP

## **TOOLS REQUIRED**


- 3/8" Socket Wrench
- Small Flathead Screwdriver (Jewelers screwdriver)

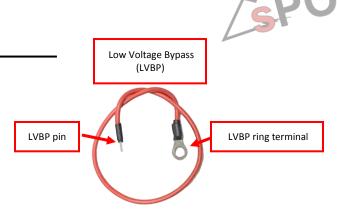


## **INSTALLATION PROCEDURE**

- 1. Remove the lid from your BantamX by simply twisting the captive thumbscrew.
- 2. Insert the Low Voltage Bypass (LVBP) pin into the LVCO port, as shown in the pictures below.

  (MAKE SURE PIN SIDE GOES IN FIRST)

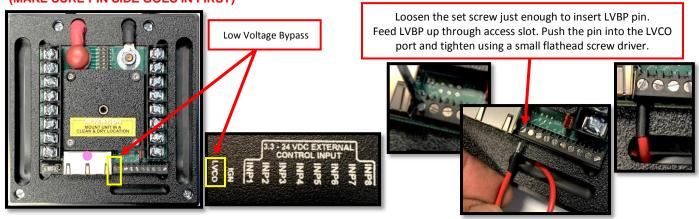

3. Remove red cap & 3/8 nut from positive battery cable terminal.

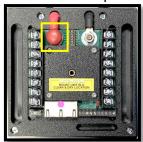



**4.** Feed the LVBP ring terminal up through slot & place the LVBP ring terminal on the stud of the positive terminal. Tighten 3/8" nut (DO NOT OVER TIGHTEN). Place red cap back onto positive terminal.







PAGE 1 WWW.4X4SPOD.COM