

# FJ-CRUISER SELF CONTAINED SWITCH PANEL DRILL TEMPLATE




- 1) REMOVE DRIVERS SIDE VENT PANEL
- 2) CUT TEMPLATE OUT
- 3) LOCATE TOP LINE TO BEGINING OF RADIUS
- 4) CENTER TEMPLATE LEFT AND RIGHT ON PANEL, ALIGN TOP EDGE AS SHOWN ABOVE
- 5) TAPE IN PLACE
- 6) DRILL EIGHT 7/32" (Ø.218) HOLES
- 7) REMOVE TEMPLATE
- 8) MAKE THE LINES WITH A MARKER TANGENT TO HOLES
- 9) CUTOUT RECTANGLE USING A DREMEL TOOL OR A SMALL RECIPROCATING SAW.

INDEX THIS TOP LINE TO THE LITTLE NOTCH AT THE BEGINING OF THE BEND (RADIUS) IN PANEL, PUSH THE PAPER INTO THE RADIUS AND THEN TAPE IN PLACE.



USE SCISSORS OR X-ACTO KNIFE AND CUT TEMPLATE TO SIZE

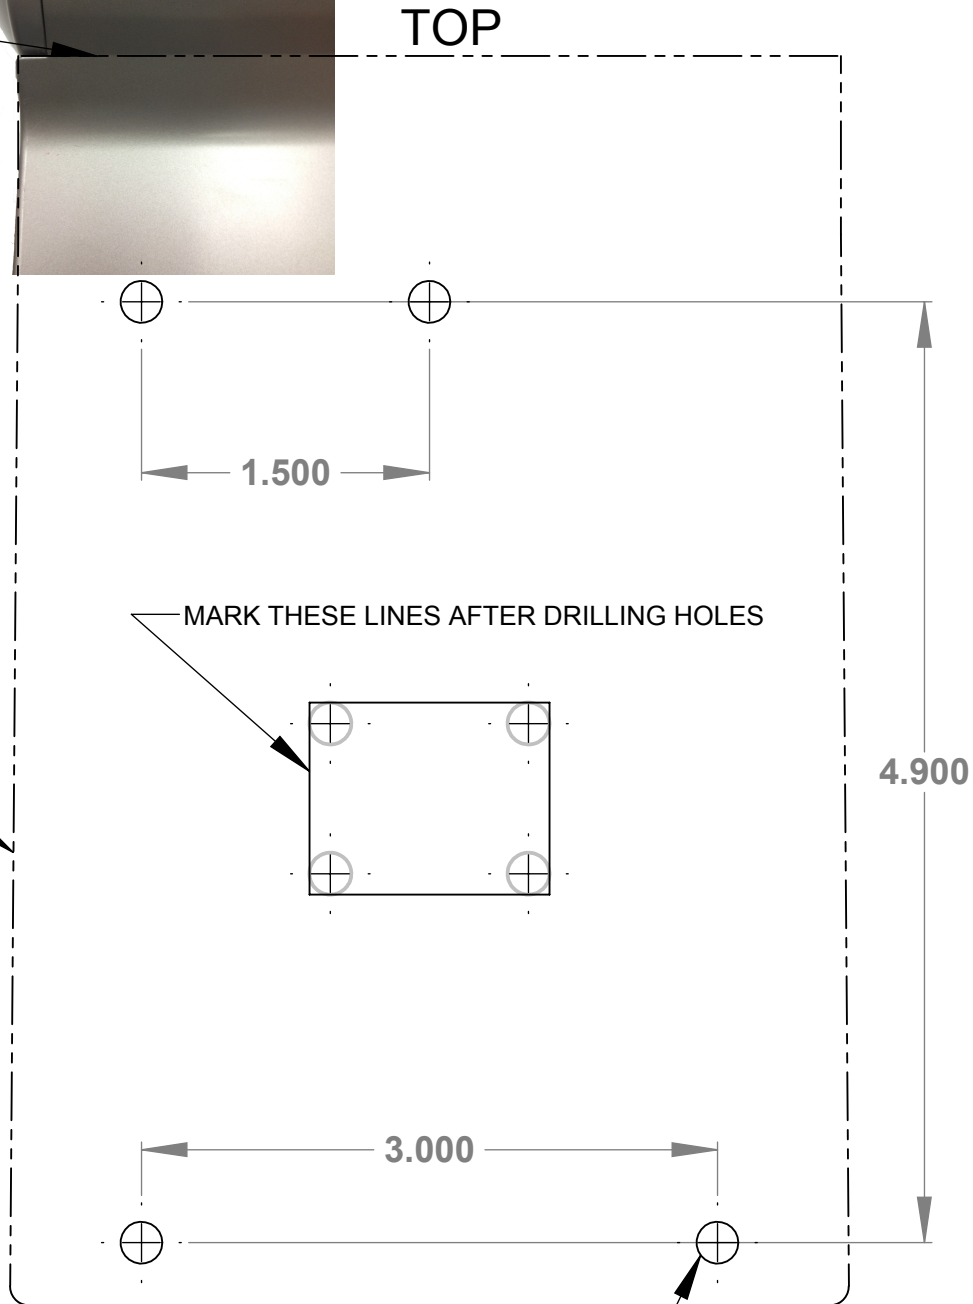

**BOTTOM**

USE A 7/32" DRILL TO DRILL 8 HOLES