

ARB ADAPTER HARNESS INSTALLATION INSTRUCTIONS

Revision 2.0 // PART NUMBER 300-ARB




TOOLS REQUIRED


- Phillips head screwdriver
- Three 5AMP fuses will be required for the 3 positions

INSTALLATION PROCEDURE

1. Familiarize yourself with the sPOD ARB Adapter Harness wire colors:

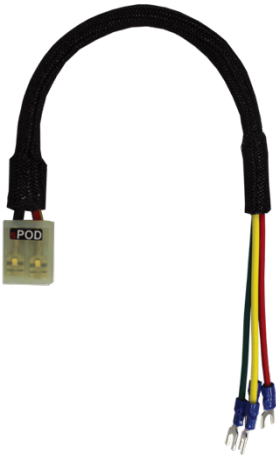

1. **RED:** Isolating switch/compressor positive lead
2. **BLACK:** Ground
3. **YELLOW:** Front locker
4. **GREEN:** Rear locker

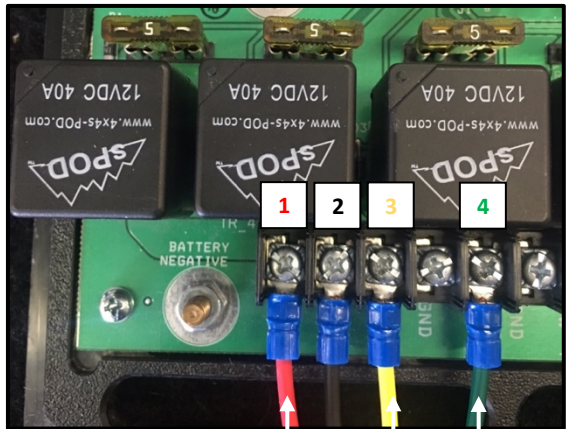

SWITCH 1 SWITCH 2 SWITCH 3

2. Attach the sPOD ARB Adapter Harness to the ARB Harness as shown:



3. The sPOD ARB Adapter Harness replaces this section of the ARB Harness

